



Referencia	Artículo	Uds. por caja
01240-734	Plato Llano 24 cm.	24
01250-736	Plato Llano 25 cm.	24
01280-739	Plato Llano 28 cm.	12
02225-720	Plato Hondo 22 cm.	24
03190-730	Plato Postre 19 cm.	36
03210-731	Plato Postre 21 cm.	24
04160-728	Plato Pan 16 cm.	36



22130-714	Ensaladera 13 cm.	24
22150-718	Ensaladera 15 cm.	24
22180-719	Ensaladera 18 cm.	24
22210-721	Ensaladera 21 cm.	24



Referencia	Artículo	Uds. por caja
05110-771	Platillo 11 cm.	36
05140-712	Platillo 14 cm.	36
05160-715	Plato consomé 16 cm.	36
07320-717	Bowl 0,32 L. Con orejas	24
07150-700	Taza 0,15 L.	36
07200-701	Taza 0,20 L.	36
07250-703	Taza 0,25 L.	24
07032-716	Taza Consomé 0,32 L.	24



09030-710	Mug 0,30 cl.	36
23300-764	Sopera 3,00 L	4
23301	Tapa Sopera	

Referencia	Artículo	Uds. por caja
20230-754	Fuente 23 cm.	12
20290-758	Fuente 29 cm.	12
20340-760	Fuente 34 cm.	12
20380-762	Fuente 38 cm.	6
21215-7304	Rabanera 21,5 cm.	12



25030-773	Cafetera 0,30 L.	12
25060-774	Cafetera 0,60 L.	12
25135-777	Cafetera 1,35 L.	6
25031-702	Tapa Cafetera 0,30 L.	
25061-701	Tapa Cafetera 0,60 L.	
26015-7005	Lechera 0,15 L.	36