



| Referencia | Artículo | Uds. por caja |
|-------------|----------------------|---------------|
| 131225-2432 | Plato Llano 22,5 cm. | 24 |
| 131250-2436 | Plato Llano 25 cm. | 24 |
| 131270-2438 | Plato Llano 27 cm. | 12 |
| 131305-2443 | Plato Llano 30,5 cm. | 12 |
| 132225-2420 | Plato Hondo 22,5 cm. | 24 |
| 133210-2431 | Plato Postre 21 cm. | 24 |
| 134165-2428 | Plato Pan 16,5 cm. | 36 |



| | | |
|-------------|---------------------|----|
| 142130-2414 | Ensaladera 13 cm. | 36 |
| 142165-2418 | Ensaladera 16,5 cm. | 36 |
| 142180-2419 | Ensaladera 18 cm. | 24 |
| 142230-2423 | Ensaladera 23 cm. | 24 |



| Referencia | Artículo | Uds. por caja |
|-------------|----------------------|---------------|
| 135130-2472 | Platillo 13 cm. | 36 |
| 135145-2427 | Platillo 14,5 cm. | 36 |
| 135165-2415 | Platillo 16,5 cm. | 36 |
| 137080-2470 | Taza 0,08 L. | 36 |
| 137100-2480 | Taza 0,10 L. | 36 |
| 137160-2401 | Taza 0,16 L. | 36 |
| 137190-2407 | Taza 0,19 L. | 36 |
| 137220-2406 | Taza 0,22 L. | 36 |
| 137320-2209 | Taza 0,32 L. | 36 |
| 137300-2417 | Taza Consomé 0,32 L. | 24 |
| 137014-2424 | Bowl 14 cm. | 24 |



| | | |
|-------------|----------------|---|
| 143300-0364 | Sopera 3,00 L. | 4 |
| 143301 | Tapa Sopera | |

| Referencia | Artículo | Uds. por caja |
|-------------|-----------------|---------------|
| 141240-2408 | Rabanera 24 cm. | 12 |
| 140290-2458 | Fuente 29 cm. | 12 |
| 140330-2460 | Fuente 33 cm. | 12 |



| | | |
|------------|-----------------------|----|
| 55030-2273 | Cafetera 0,30 L. | 12 |
| 55075-2274 | Cafetera 0,75 L. | 12 |
| 55076-2232 | Tapa Cafetera 0,30 L. | |
| 56005-2205 | Lechera 0,05 L. | |
| 56015-2204 | Lechera 0,15 L. | 24 |
| 56030-2205 | Lechera 0,30 L. | 24 |
| 55400-2222 | Tetera 0,40L. | 12 |
| 55425-2223 | Tetera 1,25 L. | |
| 55401-2240 | Tapa Tetera 0,40 L. | |